



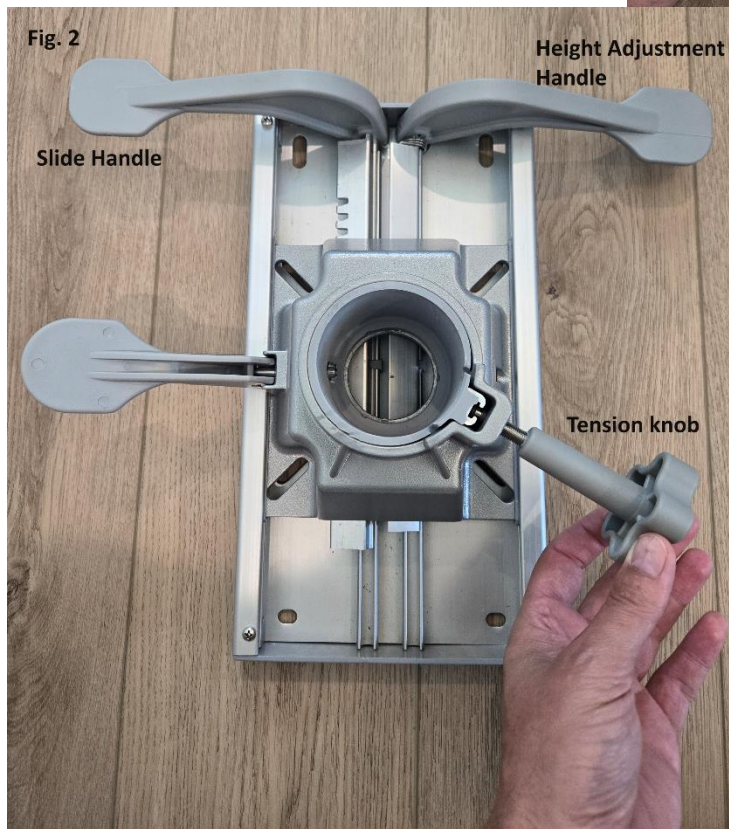

Slide/Swivel to Air Adjust Pedestal installation:

1. The swivel lever should be in a down position when placing the chair on the Air Pedestal.
 - a. This allows the Chair and Slide/Swivel to fully seat itself onto the pedestal.
 - b. Once the chair/swivel is fully seated on the air adjust pedestal move the Swivel lever back into the upright position.

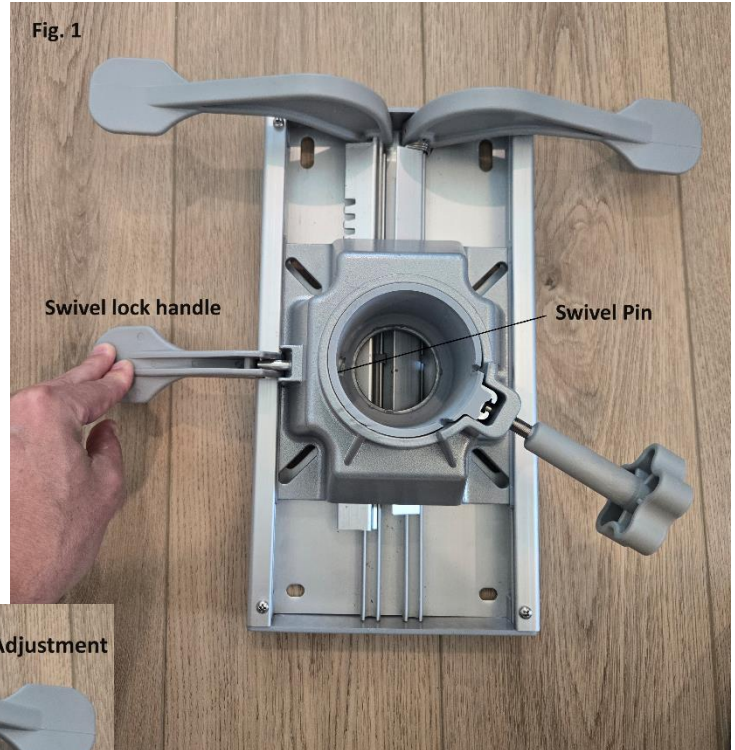

2. Turn the tension knob clockwise until tight, then back a half turn counterclockwise.

- a. This ensures the chair is secure on the pedestal and not “wobbly”
- b. The chair should be in the middle / center position when testing the up and down function. If fully forward or backwards – will be more difficult to test